





It provides protection and alarm function for the power supply to PCM or other transmission equipment.

Provides the fuses and alarm light in the front, the terminals are located at the rear.

The remote alarm system would be noted when the alarm light is ON

Replaceable fuse, it can replace the fuse from the front side without disturbing others

Case Rust proof steel panel Terminals Tinned brass pin Fuse 2A, 5A, 10A, 15A


## **Environment condition**

Operation temperature $0^{\circ}C \sim +65^{\circ}C$ Humidity $5\% \sim 95\%$  RH



Picture show 12 & 16 fuse alarm panel attach at top DSX Frame

Digital Distribution Panel DSX Frame Rack

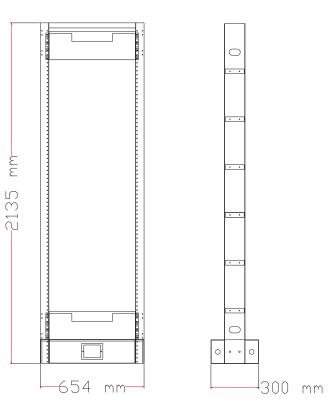



## Features

Provides at least 10 units of DSX E1 panel. 19" or 23" Frame Rack INCLUDE with Fuse Alarm Panel